


SWITCH POSITIONS

S1—SELECTOR	2—TUNER
1—AUX	3—TAPE
3—TAPE	4—PHONO
S2—TYPE	
A-45/45	
B-VERTICAL/LATERAL	
S3—FUNCTION	
1—OFF	2—L-R
3—R-L	(FORWARD)
(REVERSE)	4—MONO

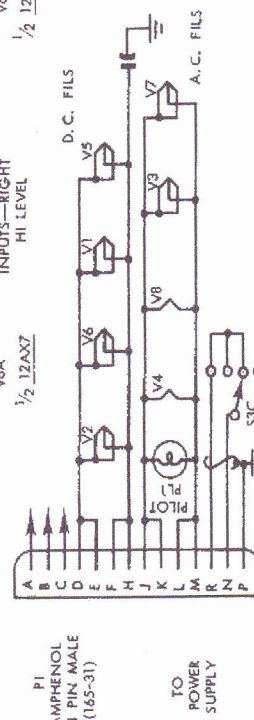

NOTES

1—TO INCLUDE TAPE HEAD PREAMP, BREAK AT X₁ AND INSERT PREAMP SHOWN IN FIG. 3. (SEE TEXT)

2—IF AUX INPUT IS TO BE USED FOR CERAMIC STEREO CARTRIDGE, BREAK AT X₁, ADD DOTTED CONNECTION. (SEE TEXT)

*MATCHED TO 18%
*LOW-NOISE DEPOSITED CARBON RESISTORS